

SoundShaker

INSTALLATION GUIDE

TABLE OF CONTENTS


What's in the box?	1
Single Bass/Dual Bass Receiver Setup	2
SoundShaker Amplifier Setup	3
Commonly Asked Questions	4
Wireless Syncing	5

SoundShaker


WHAT'S IN THE BOX?




Part No. 5102
Amplifier

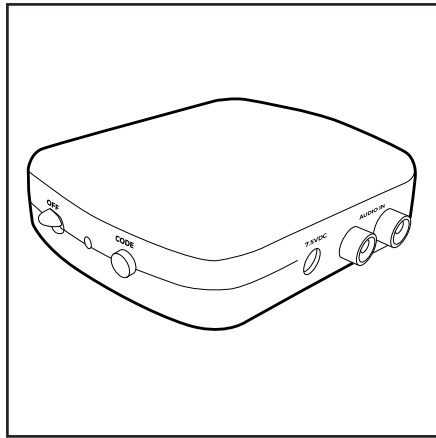


Part No. 5024
Transmitter

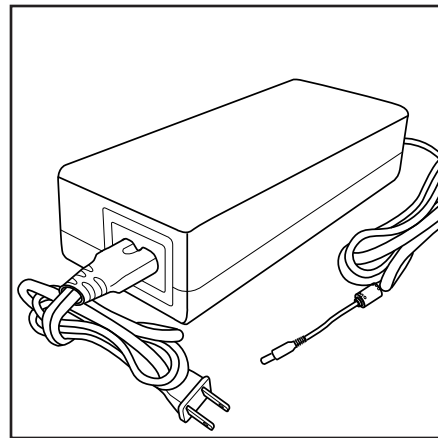


Part No. 5465
Power Supply for Amplifier

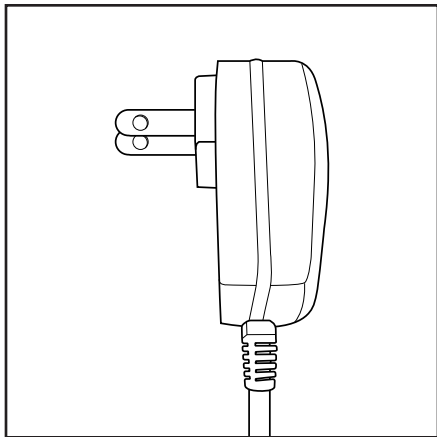


Part No. 5423
Power Supply for Transmitter

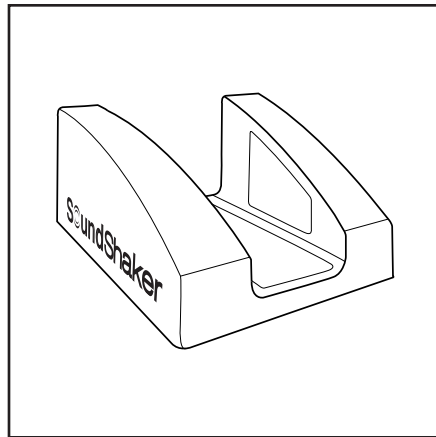


Part No. 8091
Amp Base

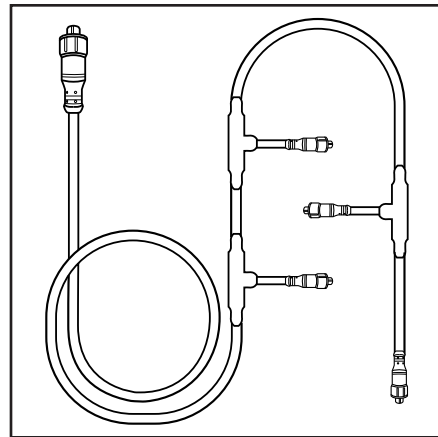

Part No. 3120
Long Cable

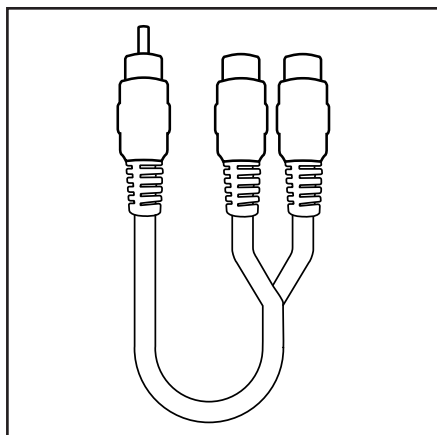

Part No. 3031
Y-Cable (M/2F)

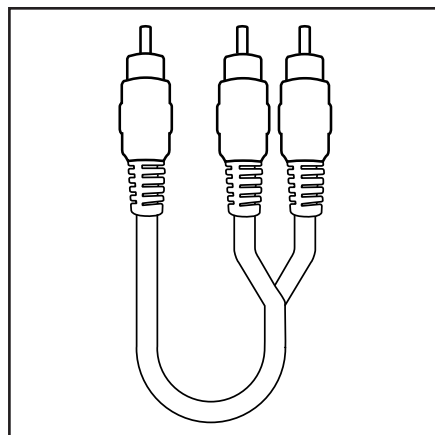


Part No. 3032
Y-Cable (M/2M)

SoundShaker

SINGLE BASS OUT RECEIVER SETUP

This is the transmitter setup for a single bass out. Please follow each step to ensure that your transmitter and amplifier are connected correctly.

5024 Transmitter

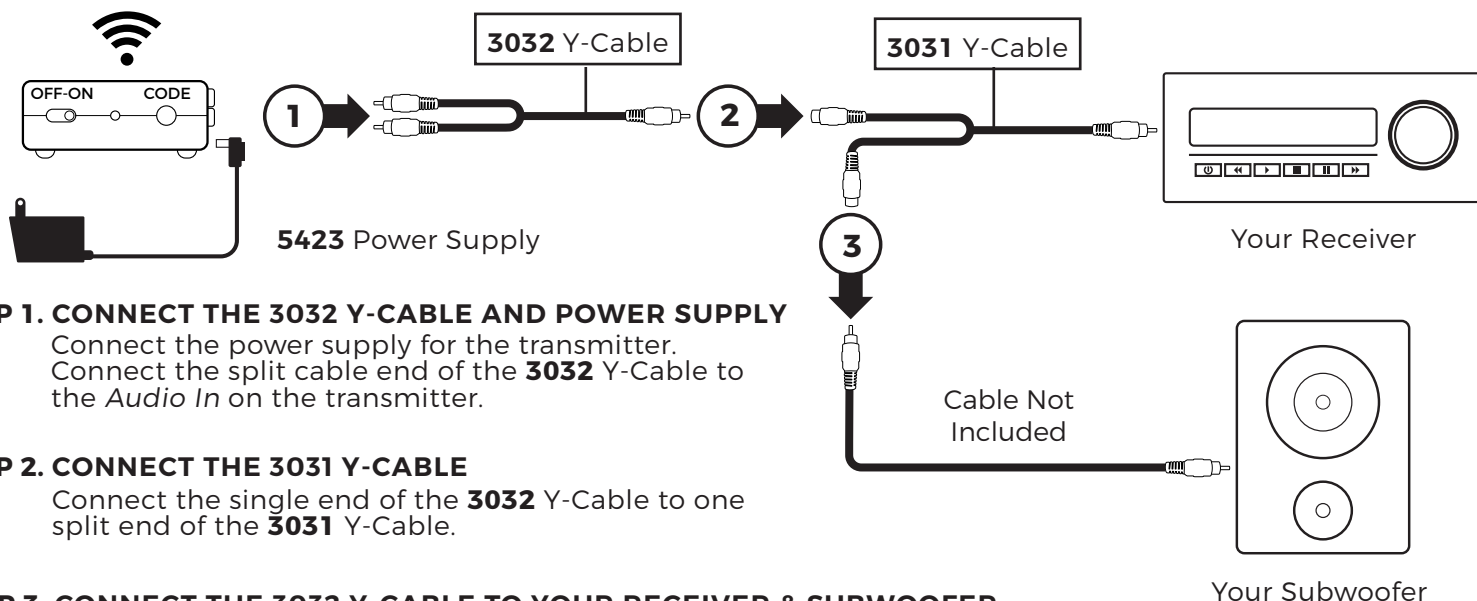

STEP 1. CONNECT THE 3032 Y-CABLE AND POWER SUPPLY

Connect the power supply for the transmitter. Connect the split cable end of the **3032** Y-Cable to the *Audio In* on the transmitter.

STEP 2. CONNECT THE 3031 Y-CABLE

Connect the single end of the **3032** Y-Cable to one split end of the **3031** Y-Cable.


STEP 3. CONNECT THE 3032 Y-CABLE TO YOUR RECEIVER & SUBWOOFER

Connect the remaining ends of the **3031** Y-Cable to both your receiver and your subwoofer. Once all connections are secure power up the transmitter.

DUAL BASS OUT RECEIVER SETUP

This is the transmitter setup for a double bass out. Please follow each step to ensure that your transmitter and amplifier are connected correctly.

5024 Transmitter

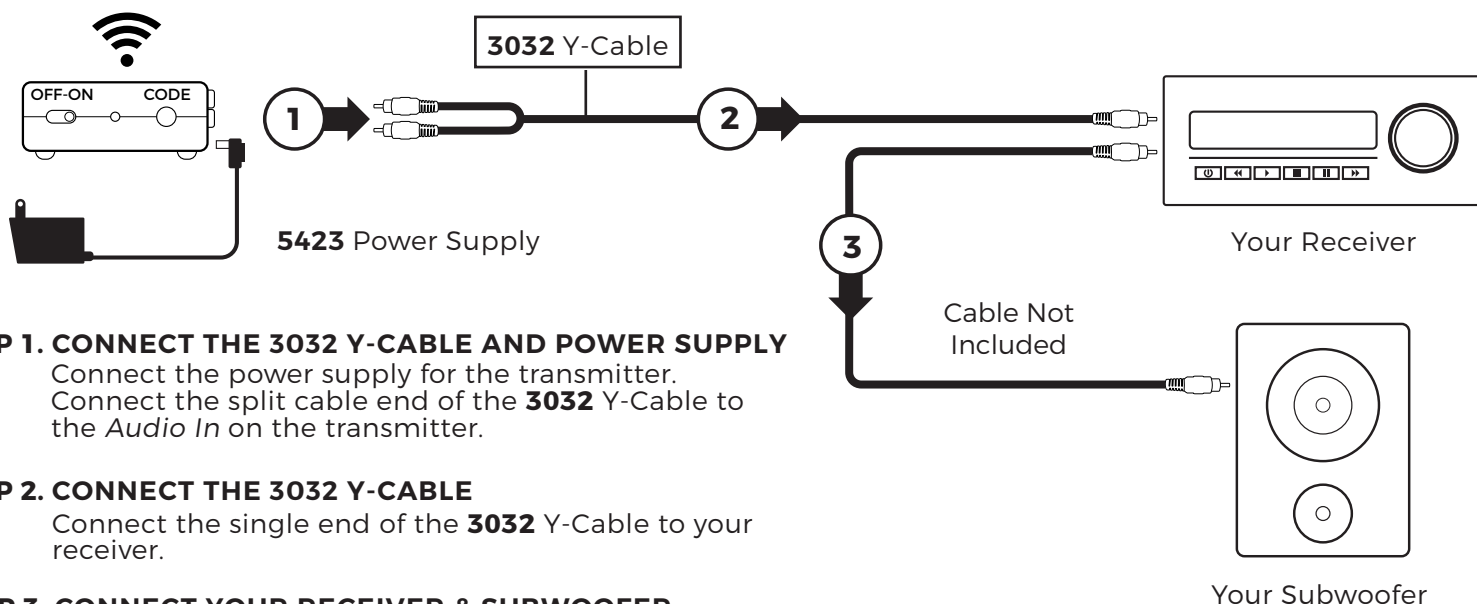

STEP 1. CONNECT THE 3032 Y-CABLE AND POWER SUPPLY

Connect the power supply for the transmitter. Connect the split cable end of the **3032** Y-Cable to the *Audio In* on the transmitter.

STEP 2. CONNECT THE 3032 Y-CABLE

Connect the single end of the **3032** Y-Cable to your receiver.

STEP 3. CONNECT YOUR RECEIVER & SUBWOOFER


Connect your receiver to your subwoofer. Once all connections are secure power up the transmitter.

SoundShaker


SOUNDShAKER AMPLIFIER SETUP

This is the main amplifier setup. Please follow each step to ensure that your amplifier is installed correctly. Make sure the transmitter is installed and is sending a signal out during the amplifier setup.

5012 SoundShaker Amplifier (Front)

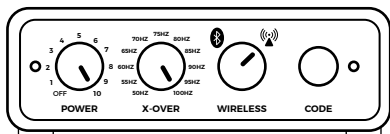

5012 SoundShaker Amplifier (Rear)

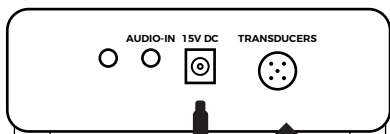

Connect Power Supply to 15V DC Port on the back of SoundShaker Amplifier.

STEP 5. CONNECT THE LONG CABLE AND POWER SUPPLY


Connect the **3120** Long Cable to the SoundShaker port on the back of the **5012** Amplifier.

STEP 6a-6b. CONNECT THE LONG CABLE TO SHORT CABLES

The **3120** Long Cable attaches to the **81-3108** Short Cables.

STEP 7a-7b. CONNECT SHORT CABLES TO SOUNDShAKER(S)

Finish by connecting each SoundShaker to a **81-3108** short cable.

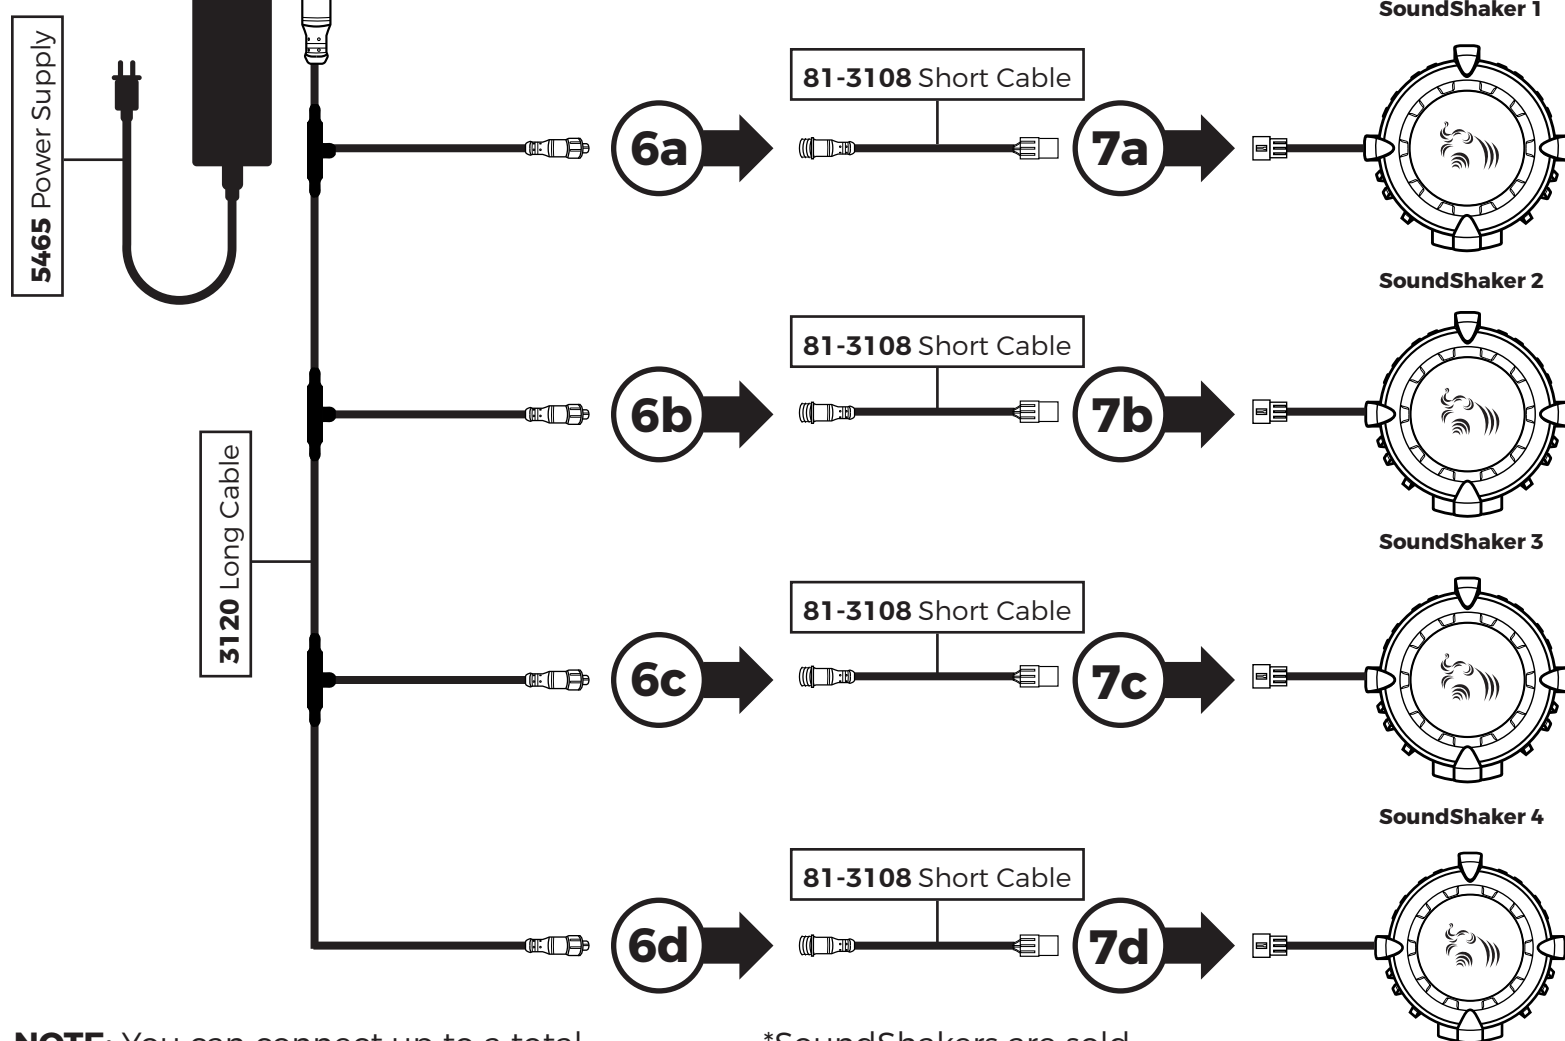

NOTE: You can connect up to a total of 4 SoundShakers to each amplifier.

*SoundShakers are sold separately.

SoundShaker

COMMONLY ASKED QUESTIONS

Below is a list of commonly asked questions. If you have any trouble with your SoundShaker please refer to the information below.

Q. DOES THE ORDER IN WHICH I CONNECT MY SOUNDSHAKERS MATTER?

A. No, the order in which your SoundShakers are connected to the long cable will not matter. The signal runs to all outputs when powered.

Q. MY SOUNDSHAKER SYSTEM DOES NOT APPEAR TO BE WORKING.

A. Check and make sure all connections and power supplies are secured. Make sure your transmitter, amplifier, receiver, and subwoofer are all powered up.

Q. IS SOUNDSHAKER COMPATIBLE WITH OTHER WIRELESS AUDIO SYSTEMS?

A. SoundShaker is compatible with any audio system that provides an RCA output to connect SoundShaker to.

Q. I'VE SYNC'D MY AMP BUT DON'T FEEL ANY VIBRATIONS.

A. When syncing your amp be sure to check that an audio signal is being sent out. Your amplifier will not sync without a signal currently running. Refer to the illustration on the next page to learn how to sync up your amplifier.


SoundShaker

SOUNDSHAKER WIRELESS SYNCING


Please follow each to step to ensure that your equipment syncs correctly.


PLEASE NOTE: YOUR SOUNDSHAKER SHOULD ALREADY BE SYNC'D WITH YOUR SOUNDSHAKER AMPLIFIER.

5012 Amplifier

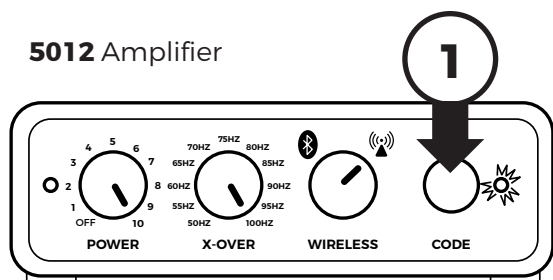

STEP 1. HOLD AMPLIFIER CODE BUTTON TO BEGIN SYNC

Make sure Wireless Switch is set to . **MAKE SURE YOU HAVE A MOVIE OR MUSIC PLAYING**, press and hold Code Button for a minimum of 3 seconds to begin syncing process. **When light blinks rapidly proceed to step 2.**

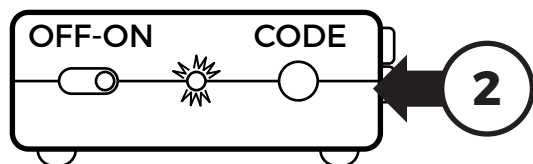

5024 Transmitter

STEP 2. HOLD TRANSMITTER CODE BUTTON TO COMPLETE SYNC WITH AMP

Press and hold Code Button for a minimum of 3 seconds until light blinks rapidly. **Red light will turn solid when pairing is completed.** (Both units should have solid red lights when paired.)